

ODW

INSTALLATION INSTRUCTIONS

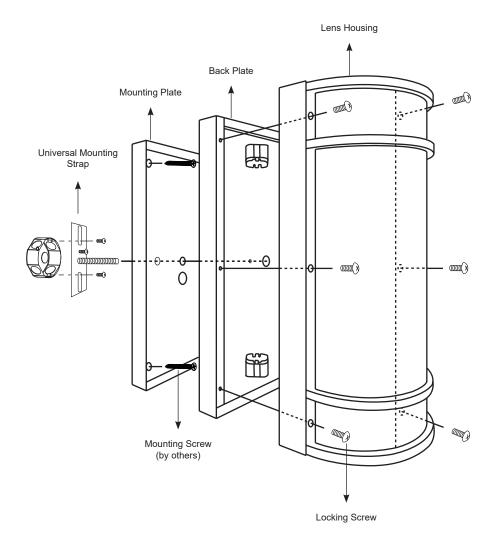

T-Bar

- 1. Install universal mounting strap to the junction box.
- 2. Make wire connections and install mounting plate over universal mounting strap with mounting screw(by others).
- 3. Put back plate to mounting plate with center nipple and tighten nut.
- 4. Place lamps in holders.
- 5. Install lens housing on back plate using the locking screws provided.
- 6. Add silicone caulking all around the back area of mounting plate.

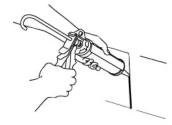

* Utopia Lighting will not take any responsibility, If you don't add silicone caulk on mounting surface. (Must apply silicone caulk to be certified under UL.)



