HIGH BAY
Installation Guide




PLEASE READ ALL INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION

- To prevent personal injury or product damage only licensed electricians should install.
- To avoid electric shock or component damage disconnect power before attempting installation or servicing.
- This product must be installed in accordance with the national electric code (NEC) and all applicable federal, state and local electric codes and safety standards.
- Disconnect product and allow cooling prior to servicing.
- Any alteration or modification of this product is expressly forbidden as it may cause serious personal injury, death, property damage and/or product malfunction.
- To prevent product malfunction and/or electrical shock this product must be properly grounded.
- This luminaire is designed to operate in ambient temperatures ranging from -40°C to 50°C and to be horizontally mounted with the LEDs facing down.
- This product must be installed in accordance with the applicable installation code by a Person familiar with the construction and operation of the product and the hazards involved.
- Min 75°C supply conductors.
- . This product is not available for several special environments, such as places with corrosive gas liquids or high pressure water vapor.

Hook installation (Default)

- 1. Tighten the hook into the 3/4 NPS screw hole of the fixture.
- 2. Tighten the PM4x6 screw beside the hook.
- 3. Connecting the wire according to the wiring diagram then installation is done.

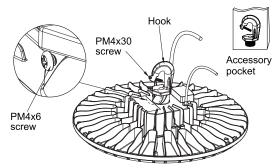


Pendant mounting with 3/4" conduit (by others) (Optional)

- 1. Drill holes about 50mm from the bottom of the 3/4 tube, with a hole diameter of 8-9mm.
- 2. In order to avoid the winding problem when twisting the steel pipe, you can first wind the input line and dimming light counterclockwise on the steel pipe 7-8 times.
- 3. After twisting the steel pipe, it is necessary to lock the M4x8 screw to prevent loosening.

3/4 inch conduit(by others) Note: Steel metal material with a thickness greater than 2.5 mm is required for conduit, and the minimum load-bearing of conduit head thread is greater than 25lb. M4x8 screw


Trunnion installation (Optional)

- 1. Secure the fixture to the mounting position, then adjust the desired angle, lock the angle adjustment screw.
- Connecting the wire according to the wiring diagram then installation is done.

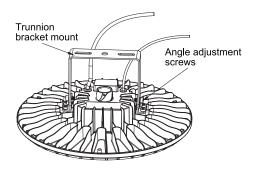

With emergency power installation (Optional)

- 1. Hang up the safety rope firstly, tighten the hook into the 3/4-14NPS hole of the fixture.
- 2. Tighten the PM4x6 screw beside the hook.
- Connecting the wire according to the wiring diagram then installation is done.

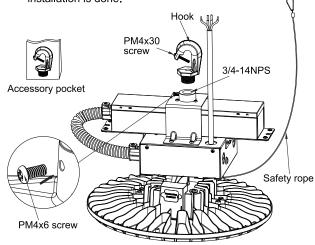


310-327-7711 utopialightingus.com info@utopialightingus.com

Power and CCT selectable version (Optional)


1. Open the silicone plug of the fixture, select the appropriate power and color temperature in the actual application of the sliding dip switch, then install the silicone plug back.

As shown in the following figure:

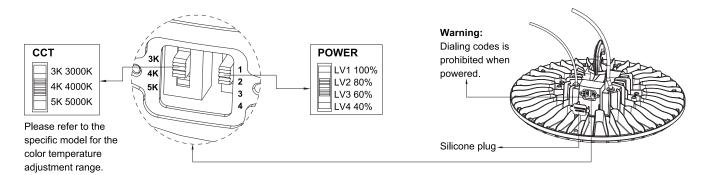

2. When installing the sensor, remove the screw plug of the fixture, insert the sensor and tighten it clockwise, as shown in the following figure:

Note: When the emergency function and sensor are used at the same time, the Sensor's stand-by time is less than 90 minutes, the sensor's stand-by time prevails, if you need to prepare for the emergency 90 minutes, you need to set the sensor's stand-by time to more than 90 minutes.

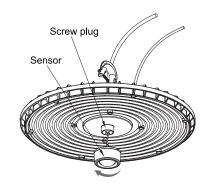

WIRING DIAGRAM

WITHOUT EMERGENCY BATTERY

	LED FIXTURES	Black	_&_	Line
		White	_A_	Neutral
		Green/Yellow Green	_A_	Ground
		Purple	_a_	DIM+
		Pink	_&_	DIM-

WITH EMERGENCY BATTERY

	Red	_A_	AC line(24/7)
	Black	_A_	AC line switch
LED	White	Δ_	Neutral
FIXTURES	Green/Yellow Green	_A_	Ground
	Purple	Д	DIM+
	Pink	Δ	DIM-